

Getting Started with the Deck Box

Step

1

What types of Sentinel V can be used with the deck box?

The Sentinel V must be Real-Time Ethernet or Real-Time RS-422:



Real-Time



Ethernet



Serial
RS-422



Step

2

Read the Deck Box User's Guide

Included with the Deck box system is a printed copy of the Deck Box User's Guide.

- Deck Box Overview
- Connecting to the ADCP
- Cable Wiring Diagrams
- Installing the Dry-Side Connector
- Specifications



Step

3


Connect the Cables

Connect the cables and then use the Sentinel V RT Utilities software to communicate with the system.

- The ADCP cable can be shipped with both connectors installed or with just the wet-end connector installed (Pigtail).



Serial Connection

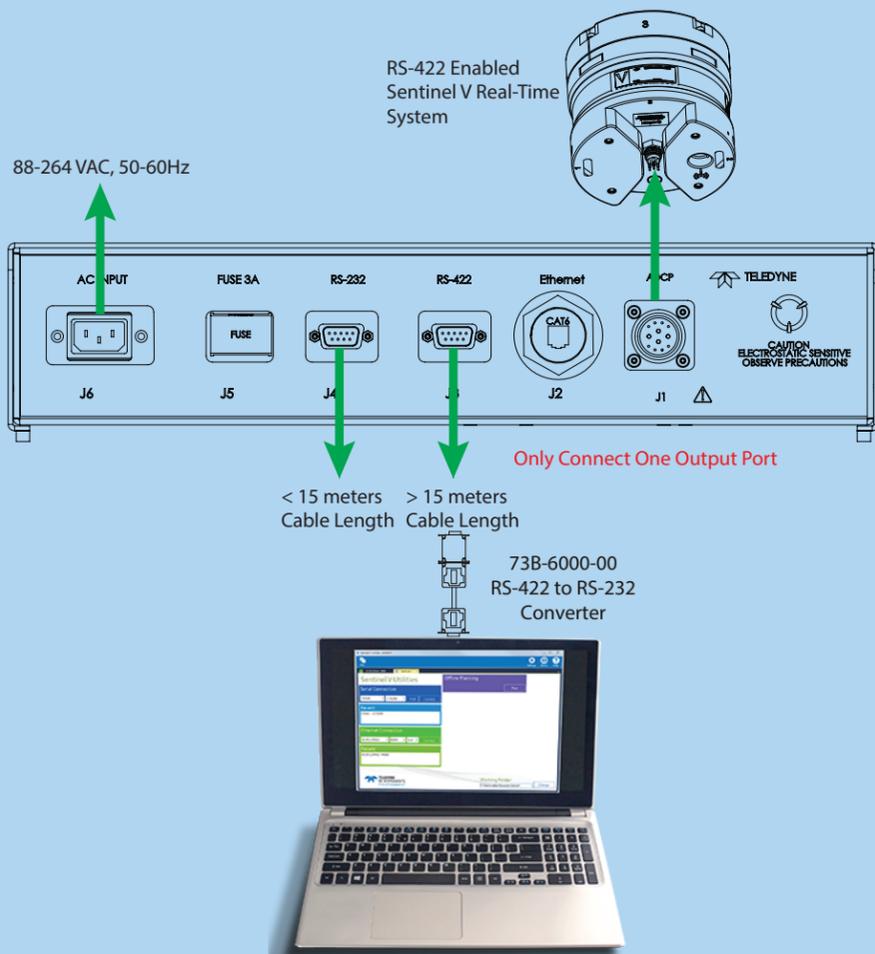

Ethernet Connection

