

Getting Started with Sentinel V

Step

1

Is the system Self-Contained or Real-Time?

Check for a SC or RT label next to the product label:



Self-Contained



Real-Time



Step

2

How do I communicate with the system?

For RT systems, check for a 232, 422 or Eth label next to the product label:
For SC systems, always connect using WLAN.



Ethernet



Serial
RS-232



Serial
RS-422

For RS-422, use a
RS-232 to RS-422 converter.

Step

3

Read the Deployment Guides

Included with the system are printed copies of both the SC and RT Deployment guides.



Step


4

Install the Software and Documentation

The Marine Measurements CD has all SC and RT software and PDF versions of all the Sentinel V SC and RT documentation.

Use the activation code to register Velocity.

- A 30-day Free Trial code is included with all Sentinel V systems.
- If Velocity is purchased with the system, a separate registration code is included.

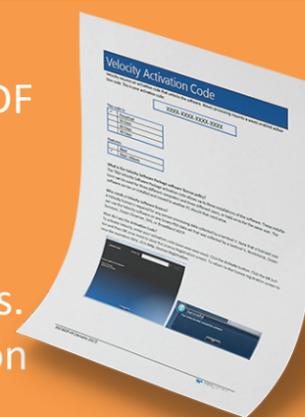

See the Software and Documentation download instructions:

- Install Sentinel V Real-Time Utilities
- Install Velocity
- Download Manual.



For easy reference, the Quick Start cards can be found in the Appendices of the Operation Manual.

